



Dry Heat Bain Marie Instructions

1. Ensure the appliance is level and correctly sited.
2. Switch on the power supply. The red neon will indicate that the power is “ON”.
3. Turn the control knob clockwise to the desired setting. The amber neon adjacent to the knob will indicate that power is going through the element.
4. Turn OFF by rotating the knob anti-clockwise to the position “O”.
5. When not in use, turn OFF at the power supply.

WARNING

The gastronorm containers should only be removed for cleaning. Do not remove the gastronorm containers until they have cooled thoroughly.

Whilst in operation, parts (including exterior surfaces) of your equipment will become hot. Position the appliance so as to minimise the possibility of accidental touching