



DUALIT SOUP KETTLE

- Use with **WET HEAT ONLY**. **It is essential to add 0.6L of water between the stainless steel liner and the internal aluminium liner.** Never overfill the inner liner with water. To maintain good heat transfer the stainless steel liner will slightly float up when under half full, this is quite normal.
- The temperature control should be set between 1 and 8, always operate the kettle at the lowest setting to maintain correct serving temperature.
- A neon light will glow when the unit is turned on. Turn the dial to 0 to switch off, unplug from the wall socket to isolate kettle from the electrical supply.
- Always keep the removable hinged lid attached and in the closed position when not serving.
- Never move or carry the kettle when turned on, or when containing hot food.
- Spilled food should be removed immediately from all exterior surfaces. The stainless steel bain-marie and lid are machine washable. The painted exterior and top collar should be wiped over with a damp soapy cloth.
- Ensure unit is unplugged when not in use, when filling and when being cleaned.
- Please ensure the soup kettle is empty of food and water when we come to collect it.

IMPORTANT – NEVER IMMERSE KETTLE IN WATER AS THIS WILL RESULT IN DAMAGE TO THE UNIT.