



LP Gas Water Boiler Instructions

To Light the Boiler:

1. Ensure the boiler has been filled with water
2. Check that the gas bottle is connected to the regulator
3. Turn on the gas at the bottle
4. Light match and hold in front of the circular hole under the tap
5. Press down the valve on the right hand side of the boiler
6. Boiler will light within a few seconds
7. After the burner has lit continue to depress the valve for 20 seconds until the flame is established.
- 8. Please be patient when lighting the equipment as it can take a few minutes for the air to clear the pipes before the flame will stay alight**

To Turn off the Boiler:

1. Turn off the gas at the bottle

Please note:

1. The boiler should be left to cool down for at least ten minutes prior to re-lighting.
2. **Under no circumstances let the boiler run dry**, as you could cause serious damage to the appliance
3. **Do not, under any circumstances, try to lift the boiler with the tap**, this will damage the tap and cause the boiler to leak.